


WARNING: Moving parts, beware of entrapment areas

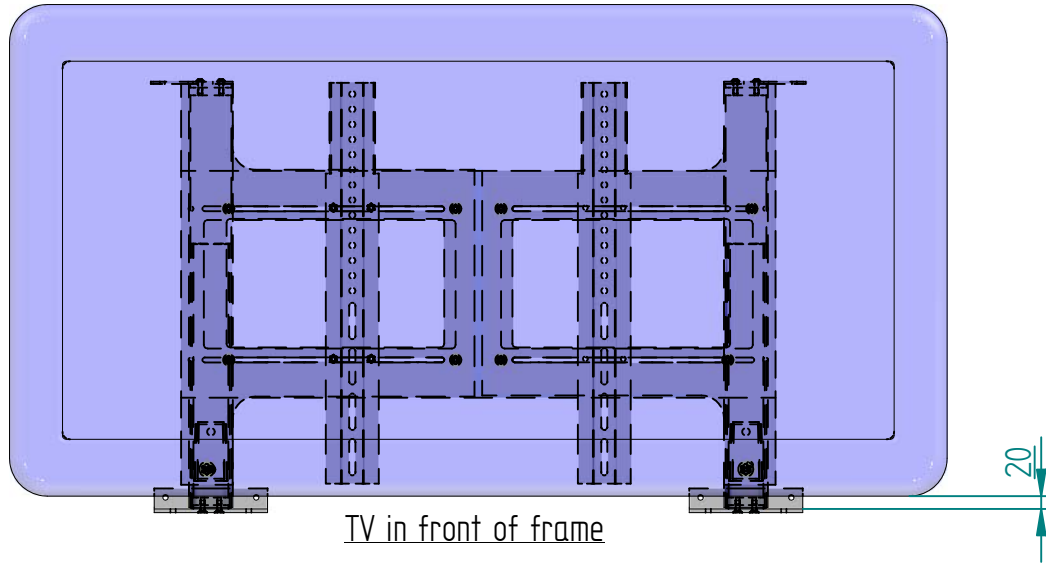


Assembly Instructions-motiontv

1. Check all parts are supplied
2. If TV is going in between the uprights-loosen nuts on back plate and extend back plate so that uprights are on either side of the TV.
3. Mount the TV to the back plate-some holes may match up to TV mounting wall mounting holes. Alternatively drill holes in back plate to match TV. (spacers will be required to clear bolts on back plate-not provided)
4. Make sure when the TV is mounted that there is 20mm clearance below the TV and the cabinet. This is required for initialization.
5. Make sure all bolts are tightened.
6. Fix the frame to the cabinet using all 6 holes provided in the foot..
7. Connect the Power Cable.
8. Turn the power on.
9. Press the "Down" button on the panel for 5 seconds. The frame will rise and fall around 5mm and initialize the system.
10. Fasten the panel to the edge of the cabinet in an accessible location in case initialization is required in future.
11. Tie all cable using "Cable Ties" and make sure no wires can be cut by the movement of the frame.
12. Neaten all loose cabling.
13. Make sure all screws are tight.

Open up back plate to match width of TV

Note: When connecting opening of cabinet to frame, do not fasten, only use location dowls. This ensures no entrapment when frame closes

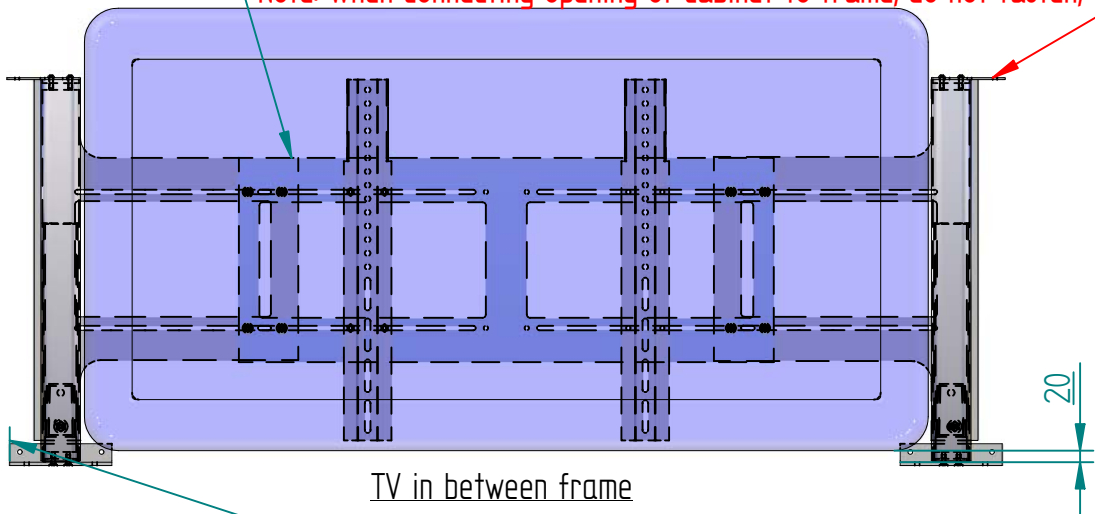

Use all 6 holes provided to bolt to cabinet

Before installation, de-installation or troubleshooting

- Stop the Electric legs
- Switch off the power supply and pull out the mains plug.
- Relieve the electric legs of any loads, which may be released during the work.

Before start-up:

- Make sure that the system has been installed as instructed alongside.
- Make sure that the voltage at the control box is correct before the system is connected to the mains.

System connection:

The individual parts must be connected before the control box is connected to the mains.

During operation:

- If the control box makes unusual noises or smells switch off the mains voltage immediately.
- Take care that the cables are not damaged.

© Copyright all rights reserved.

This drawing is the property of Ergomotion Pty Ltd. It may not be copied in whole or part nor can it be used for the manufacture of any equipment described without written permission of Ergomotion. Ergomotion reserves the right to change, without notice, the specifications and materials contained in this drawing and shall not be responsible for any damages (including consequential) caused by reliance on the information presented.

Customer:

Date:

ergomotion

PO Box 234, East Bentleigh, VIC, 3165
+61 3 95791454

TITLE: Assembly guide for motiontv-DL442

Designed by Guy Topolansky